

INSTALLING INSTRUCTIONS

smart^{TOP} 996



Comfort roof control unit for Porsche 911 Cabrio (996)



Open the roof to the service position as shown.



Locate the retaining wires and the ball-and-socket joints that hold them.



Unplug the ball-and-socket joints by tilting and pulling horizontally.




Open the rear section of the roof as shown.



Carefully remove the plastic plugs using a knife or screwdriver.



Remove the carpet to see the large grey box which is the roof control unit.

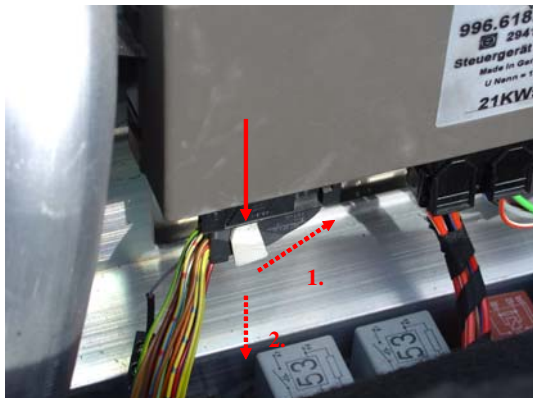

Unlock the left connector by pushing the small black nipple under the white bracket in, and simultaneously move the white bracket to the right as shown.




Unplug the connector.



Plug the (female) connector onto the (male) pinheader of the smartTOP module; make sure it sits straight and tight, with the wires to the left side as shown.



Plug the whole smartTOP module with it's top end into the control unit where the plug was, carefully moving it back and forth as well as left and right until it fits tightly into the socket.

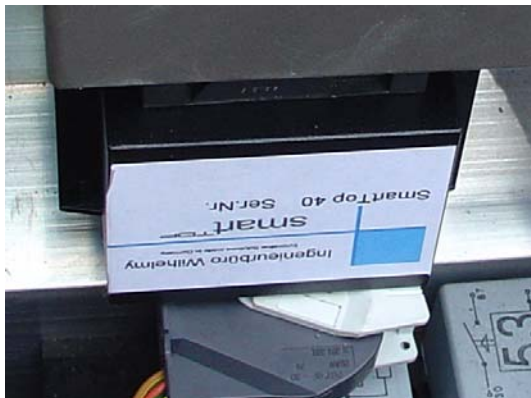

Make sure the smartTOP sits tight and the plastic box touches the edge of the socket. The label may not be upside down as shown!



Put the carpet back in place and fix with the black plugs. Plug the ends of the retaining wires back onto the ball-and-socket joints.

Optional step: securing the smartTOP using the provided Velcro tape



Loosen screws of control unit and put the Velcro tape around smartTOP and control unit.



Carefully tighten the tape and stick together, making sure the smartTOP module cannot slide out of the socket even on roughest roads.